

# Fitting instructions | Premium Canopy Roof Vent

Part number:

Installation time: 0.5 hours

**Important**

- Read instructions carefully before installation.
- It is strongly recommended that installation is conducted by an authorized dealer.
- This product must be installed exactly as specified in these instructions. Failure to do so may result in improper fit and/or retention/failure of components.

**PERSONAL PROTECTIVE EQUIPMENT:**

Mask

Rubber Gloves

Goggles

Hearing Protection

**Care Instructions:**

Clean canopy with a mild detergent and water solution.


Do not use abrasive cleaners or solvents.

# Parts


Check the contents of the kit prior to fitment. If the kit is incomplete or if any items are damaged, they must be replaced using the specified components.

## Supplied parts.

Roof Vent  
x 1

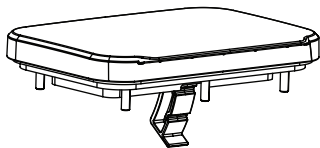

Vent Shaft  
x 1

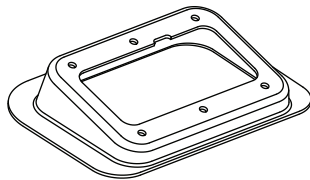

M5 Nylock Nut  
x 6




M5 Flat Washer  
x 6



## Required tools.


Non permanent marker

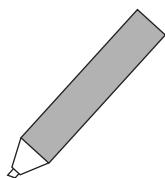


Jig Saw




Drill & Drill Bits:  
Ø6mm, Ø10mm

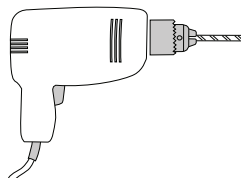


Torque wrench - 0-20Nm

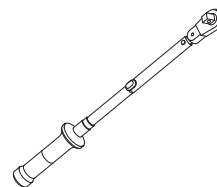


Socket 8mm  
Extension Bar & Ratchet

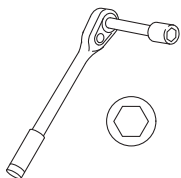


Spanner 8mm




Masking Tape

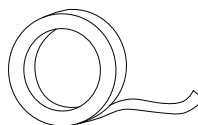

Scissors



Knife

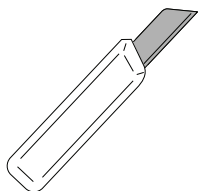


# Installation instructions.

## Step 1.

Required tools: Knife.


1. Choose the left or right side of the car to fit the Roof Vent.
2. Inside the canopy remove the section of the roof liner using a knife and following the line eatched in the liner as shown.

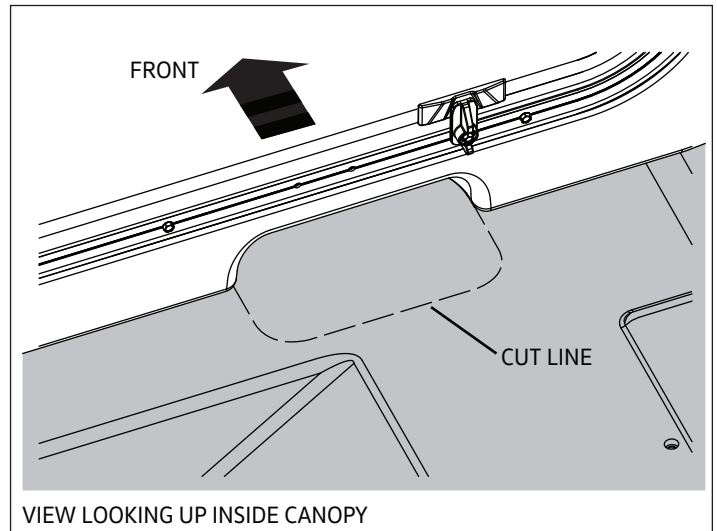

## Step 2.

Required tools: Drill & 12mm Drill bit.


1. Locate the 4 indents inside the canopy shell.
2. Drill the 4 holes with 12mm Dia drill bit.

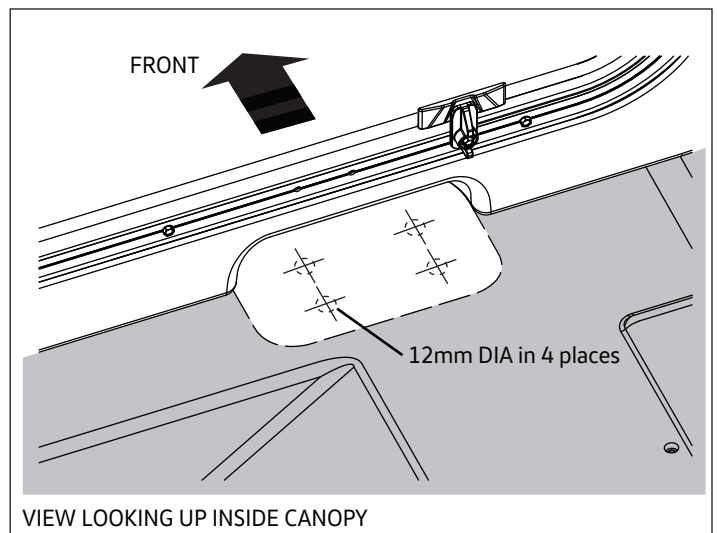

## Step 3.

Required tools: Jig Saw, Straight edge, Masking Tape, Pen.

1. On the top of the canopy, use masking tape to protect the painted surface along the path where the jig saw will travel.
2. Join the holes with lines on top of the masking tape as shown.
3. Cut along the lines with Jig Saw.

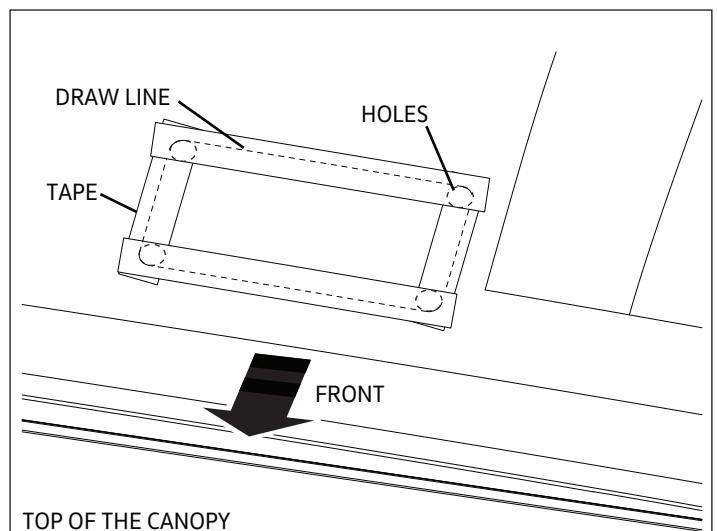


# Installation instructions.

## Step 4.


Required tools: Center Punch, Drill and 6mm Dia drill bit.

1. Place the Paper Drill Template on top of canopy aligning with the cut-out and center punch the 6 hole locations.
2. Drill the 6 locations with 6mm Dia drill bit.

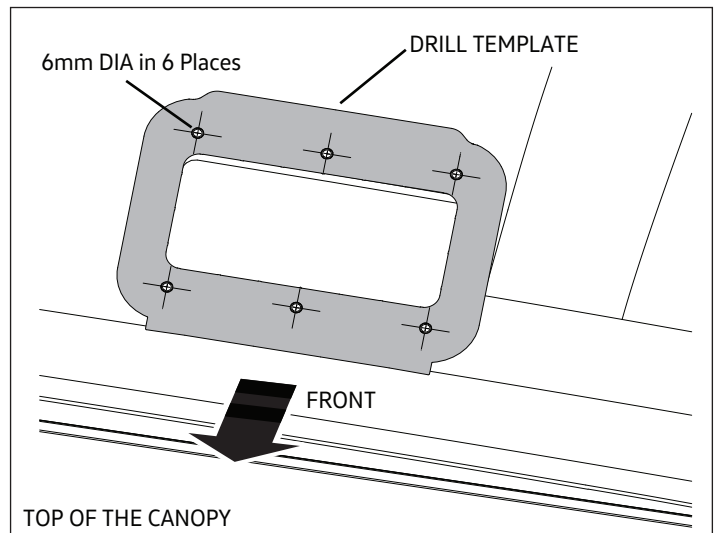

## Step 5.


1. Place the Roof Vent on the canopy as shown.

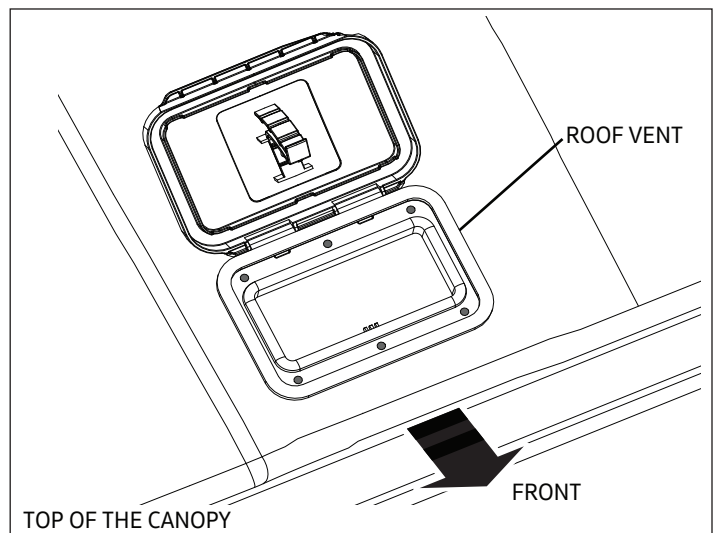

## Step 6.

Required tools: Spanner 8mm.

1. Place the Vent Shaft inside the canopy over the 6 studs from the vent.
2. Secure the vent with 6 M5 washers and Nuts.
3. Tighten the M5 Nylock nuts to torque 5Nm.

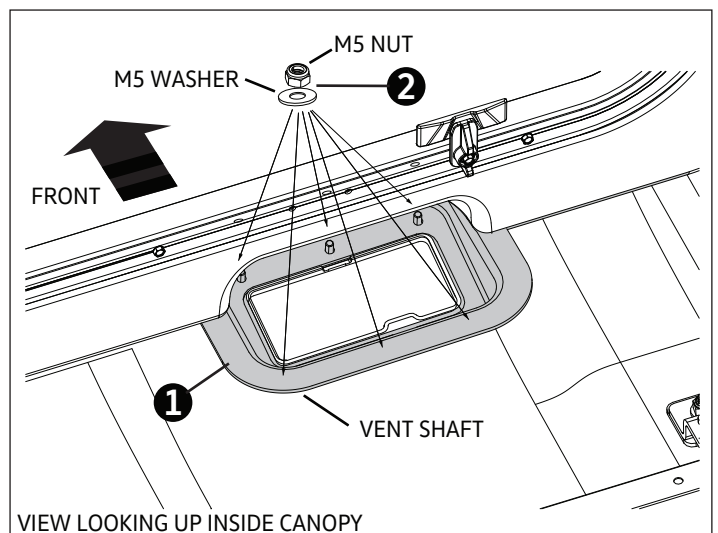


BLANK PAGE


CANOPY ROOF VENT TEMPLATE




CHECK THE PRINTED TEMPLATE USING RULLER.  
ADJUST SCALE USING A PHOTOCOPYING MACHINE  
AND REPRINT.



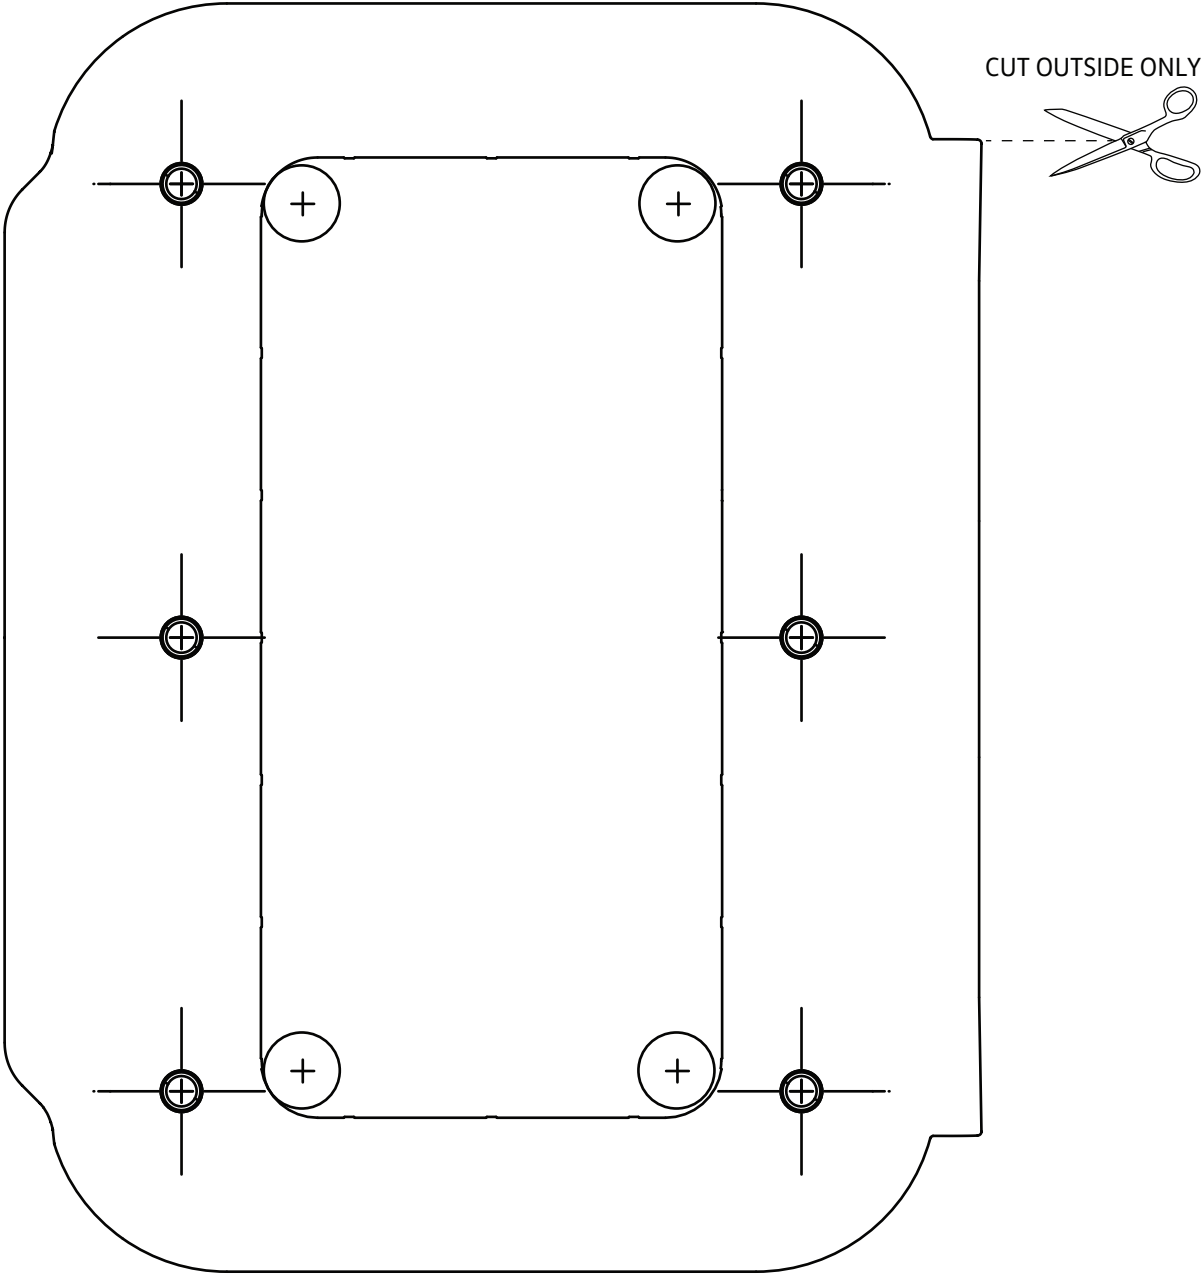





100mm when printed scale 1:1

