

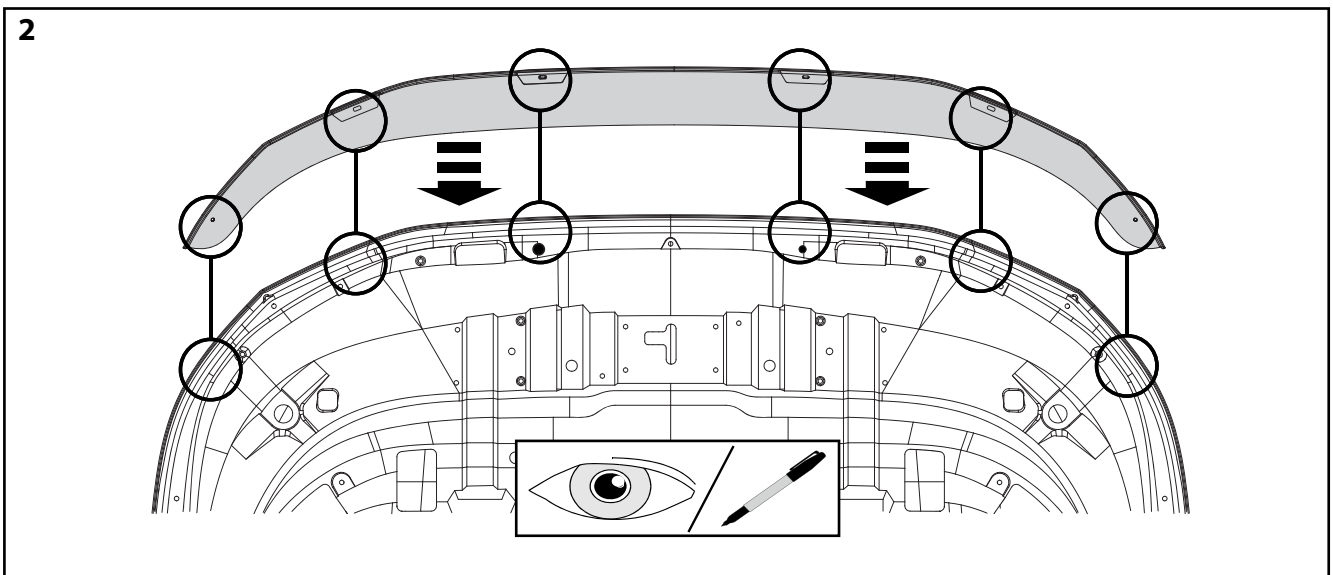
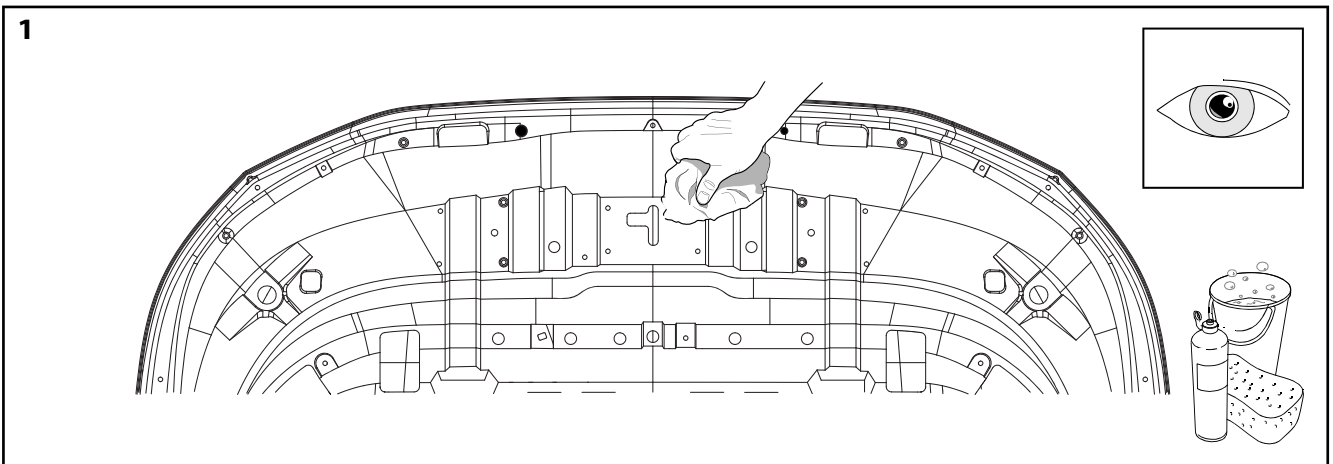


# ACRYLIC BONNET PROTECTOR INSTALLATION INSTRUCTIONS


B2655  
1/4

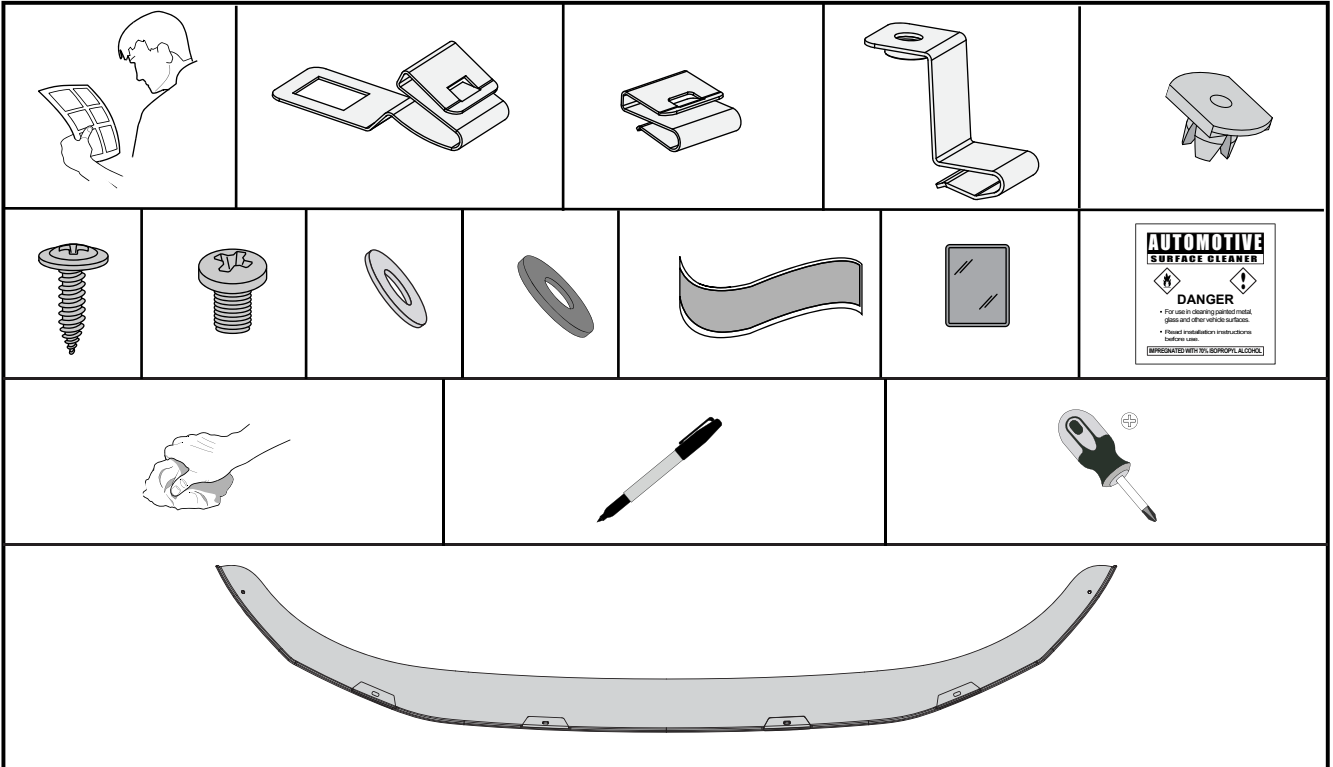


3

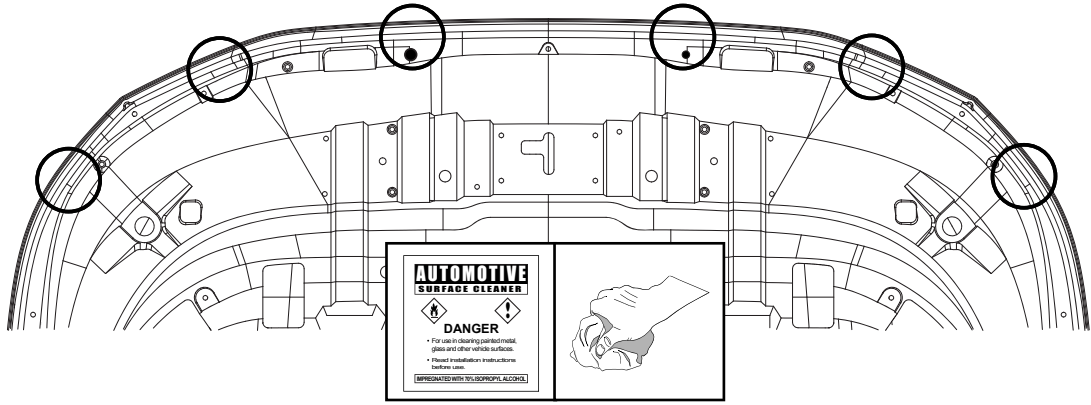


4

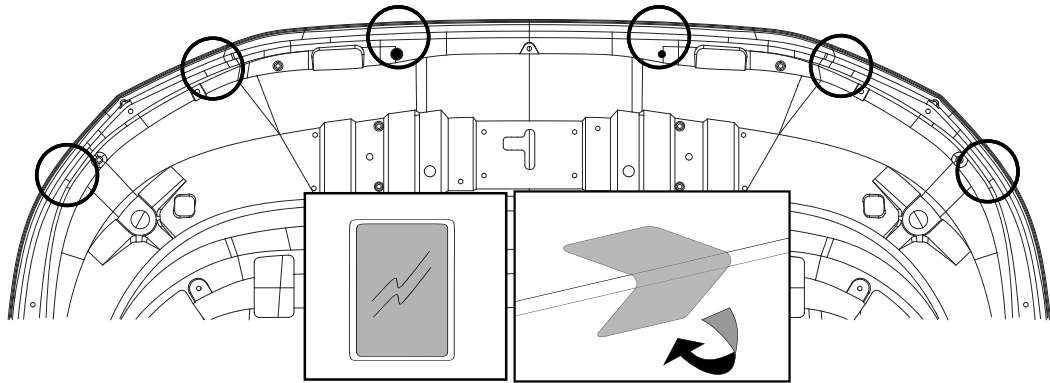


5

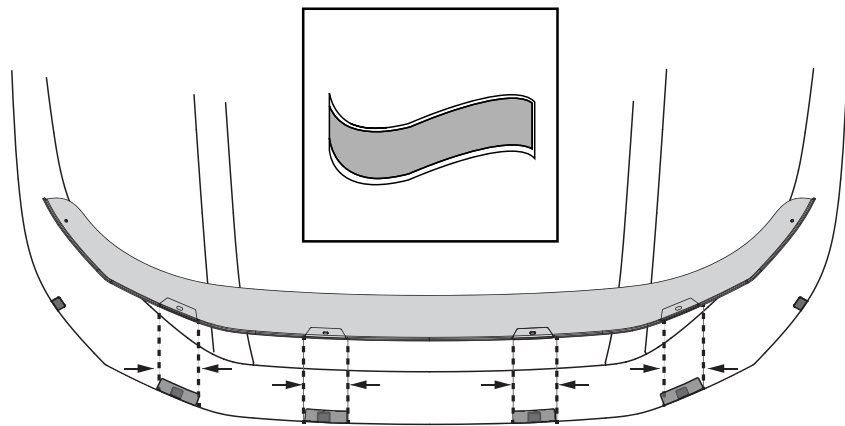


6

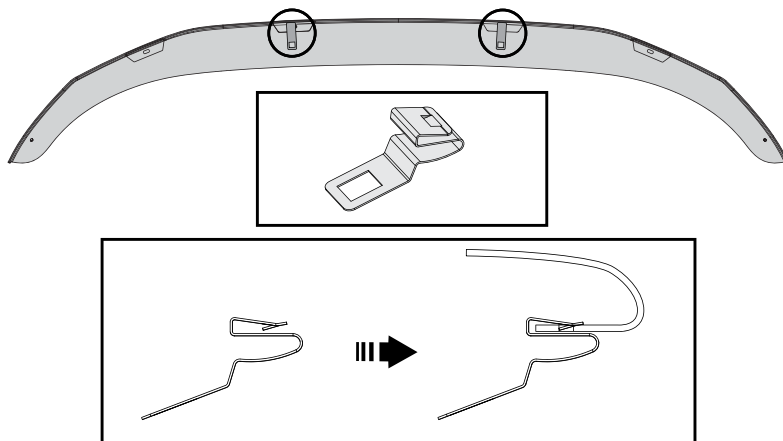


7

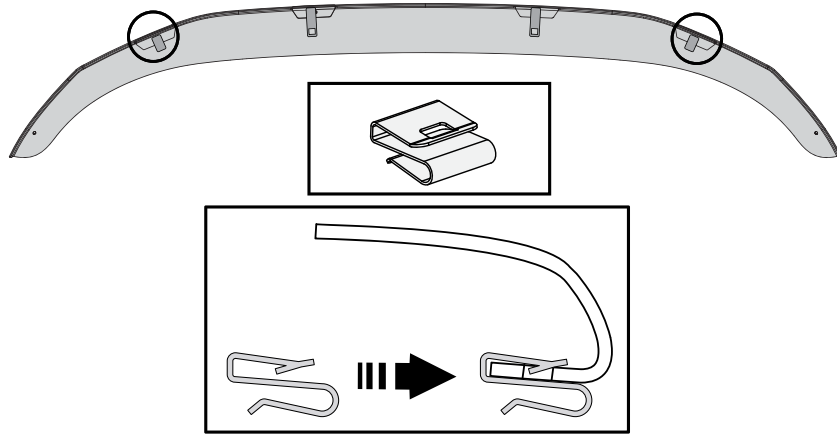


8

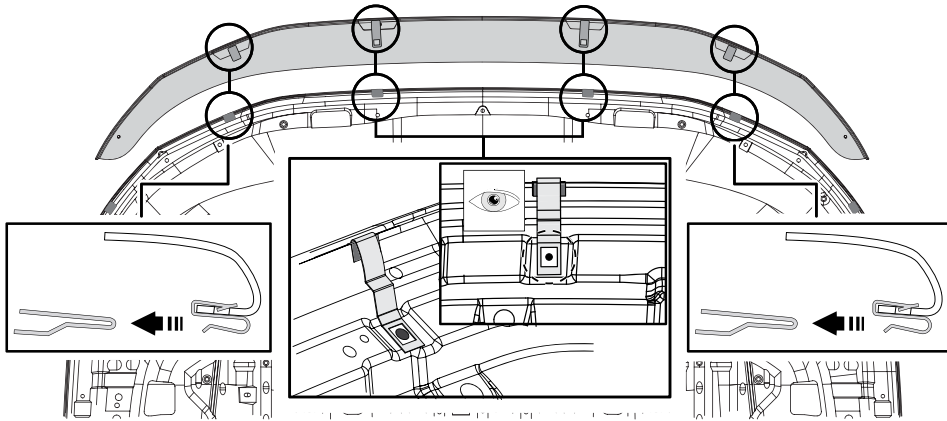

9

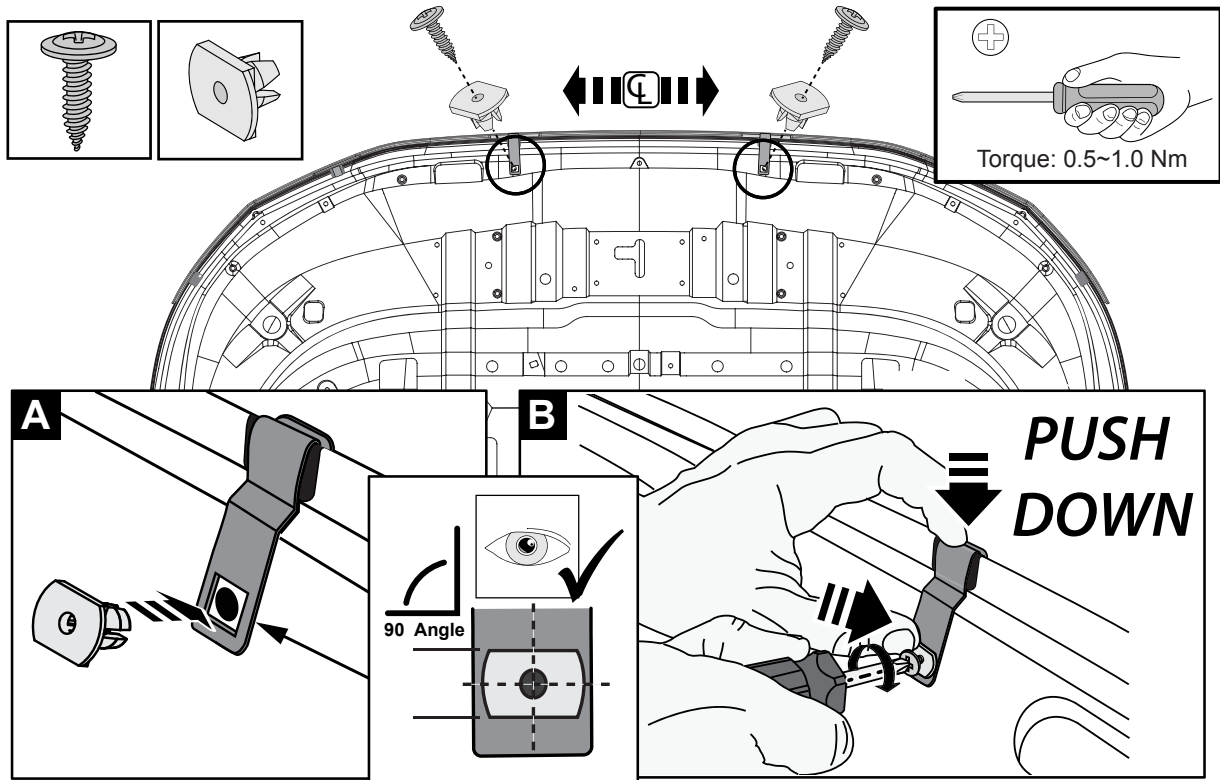

10

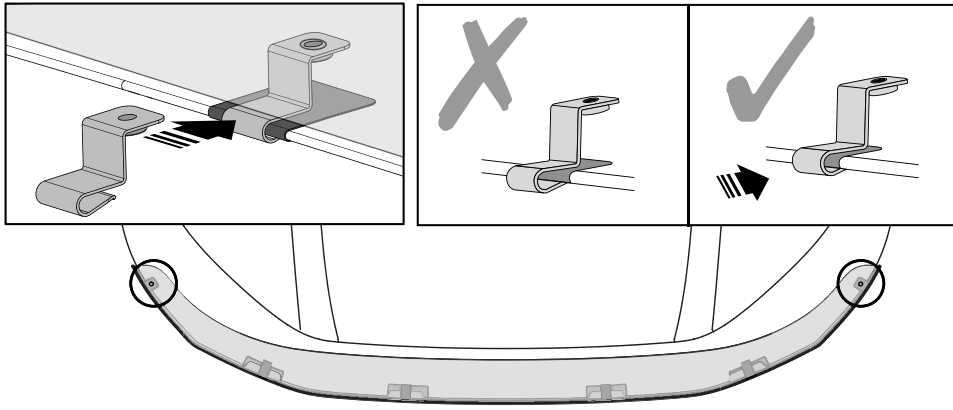

11

