

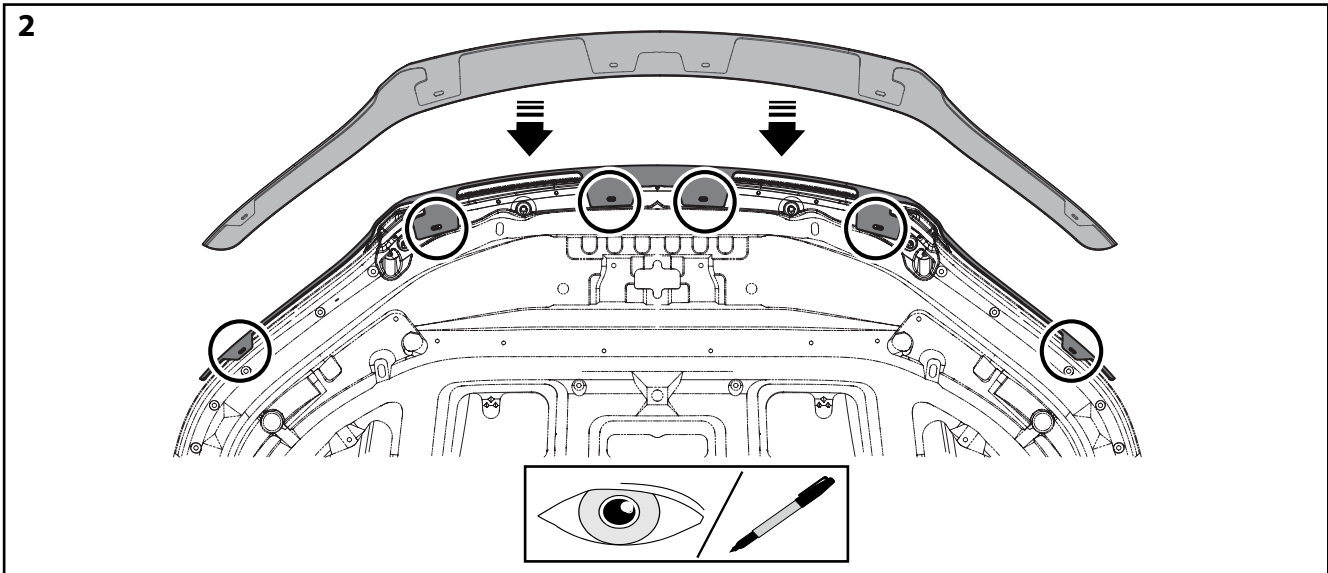
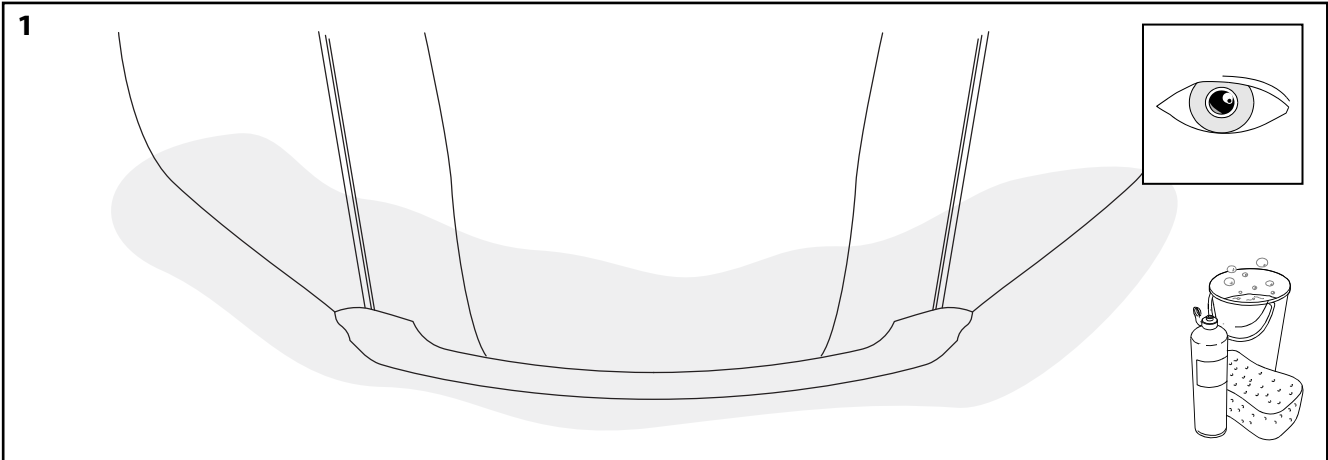
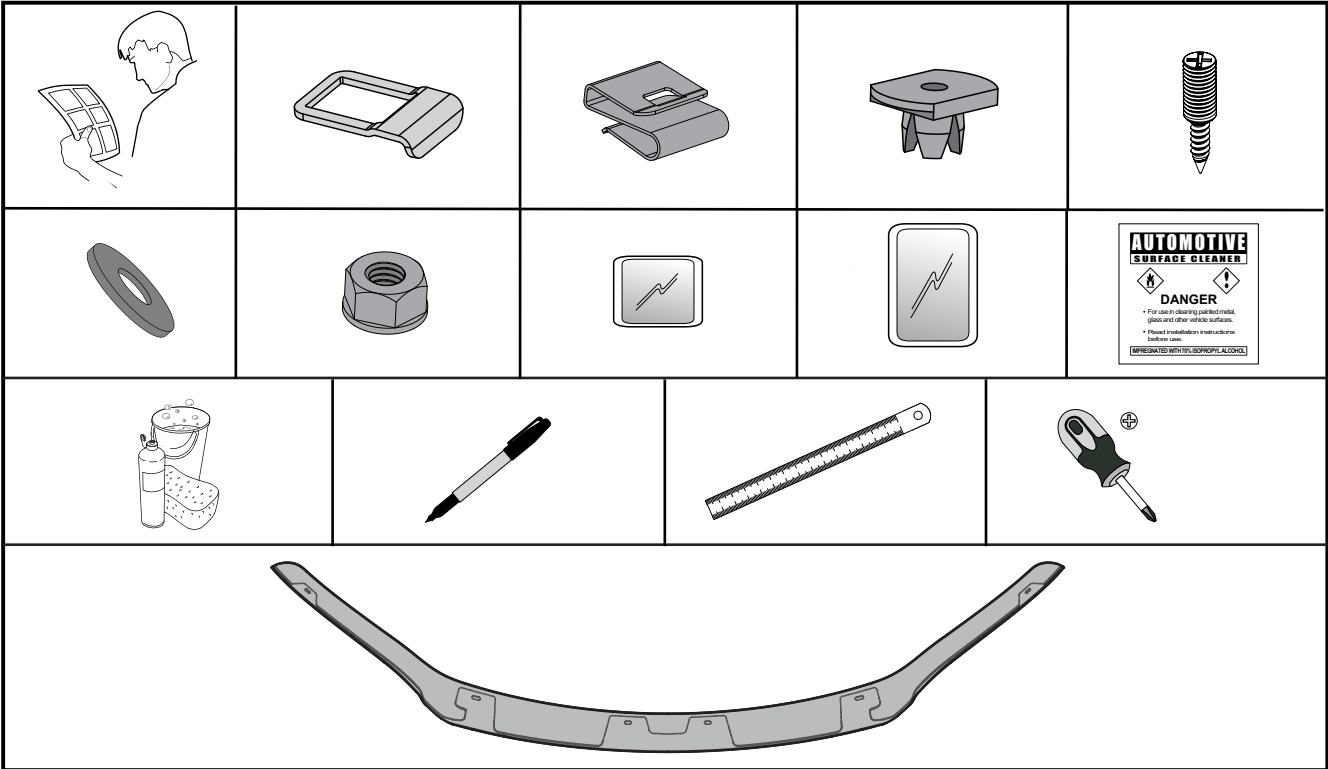


ACRYLIC BONNET PROTECTOR INSTALLATION INSTRUCTIONS


B2686
1/4

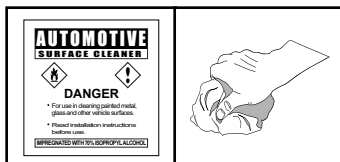


3

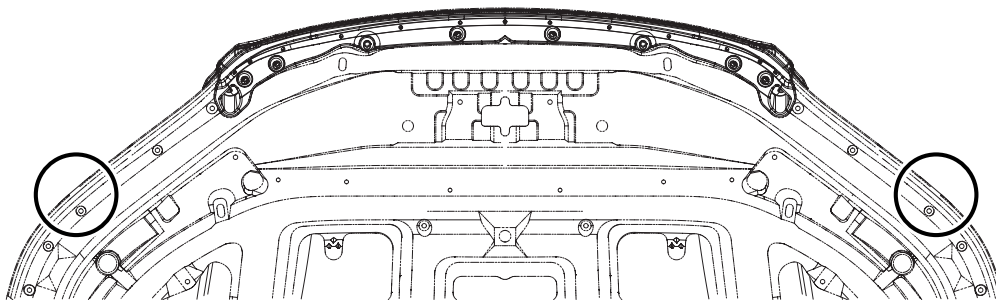



4

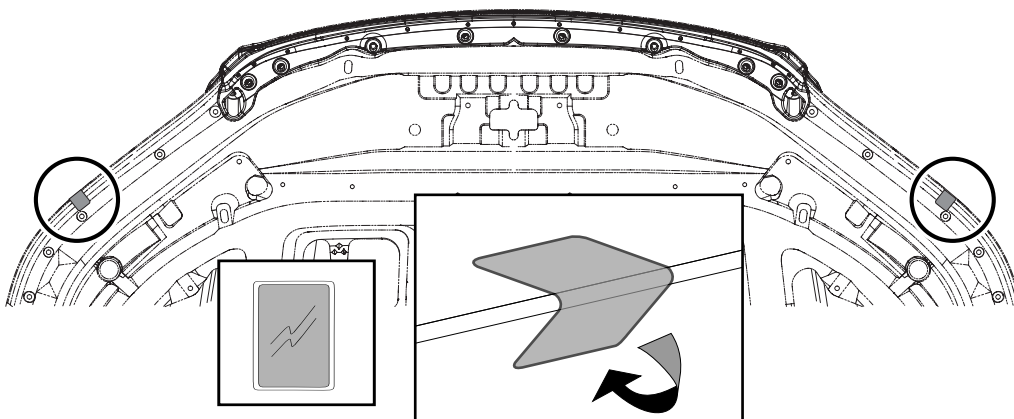


5

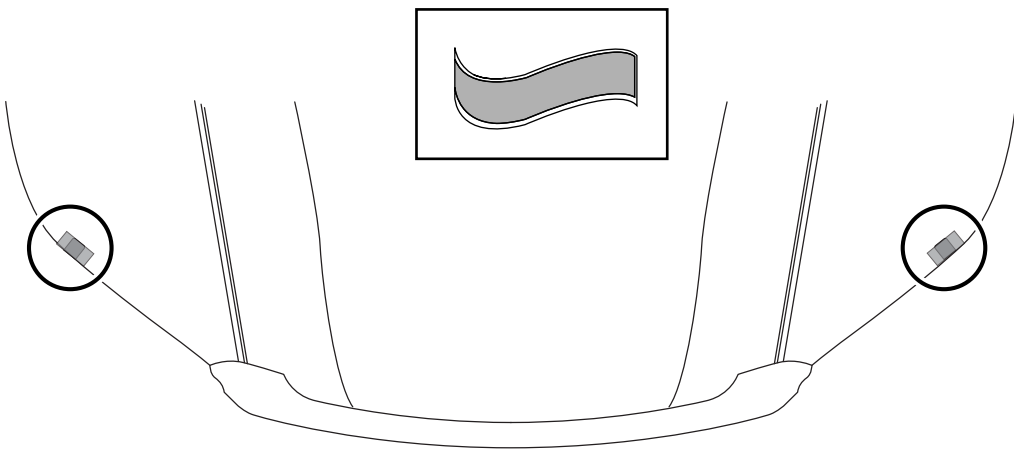


6

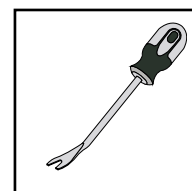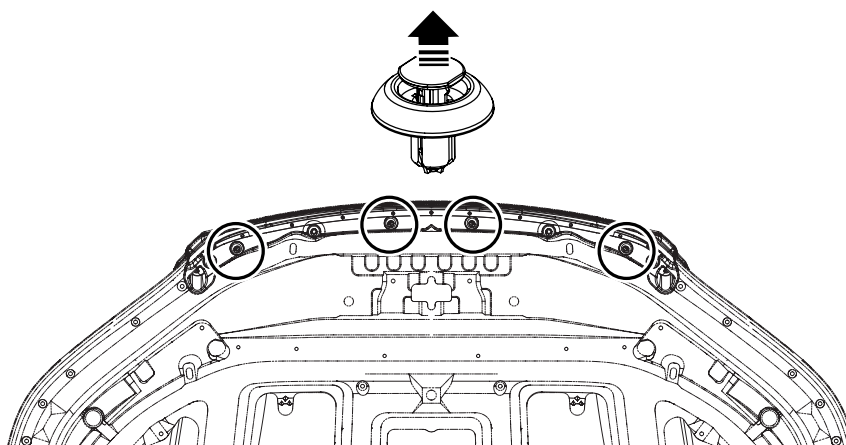


7

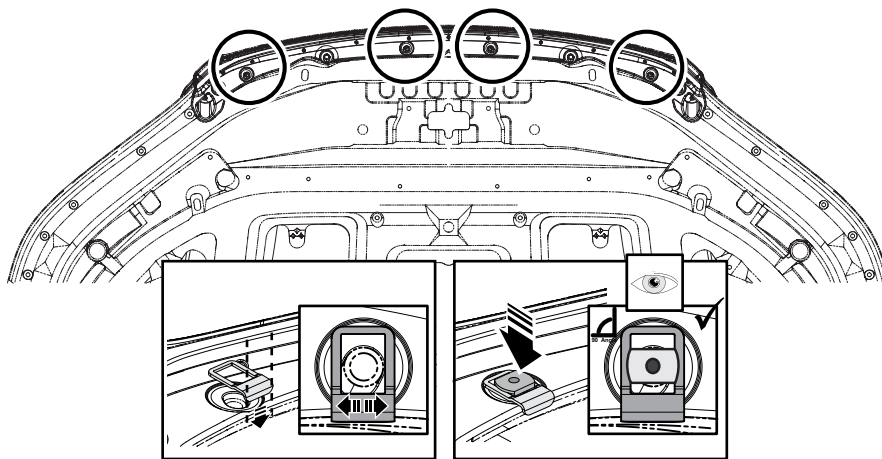


8

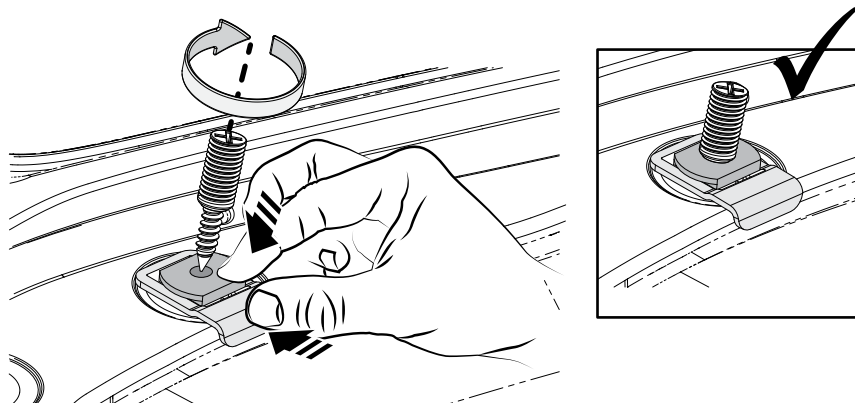



9

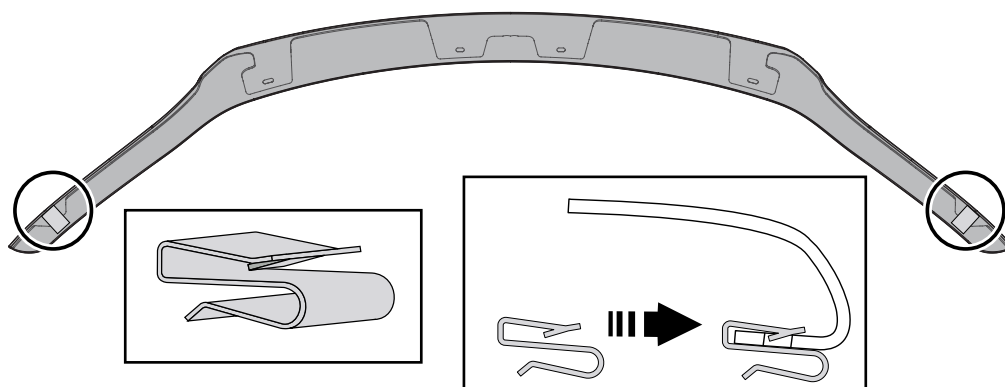

10

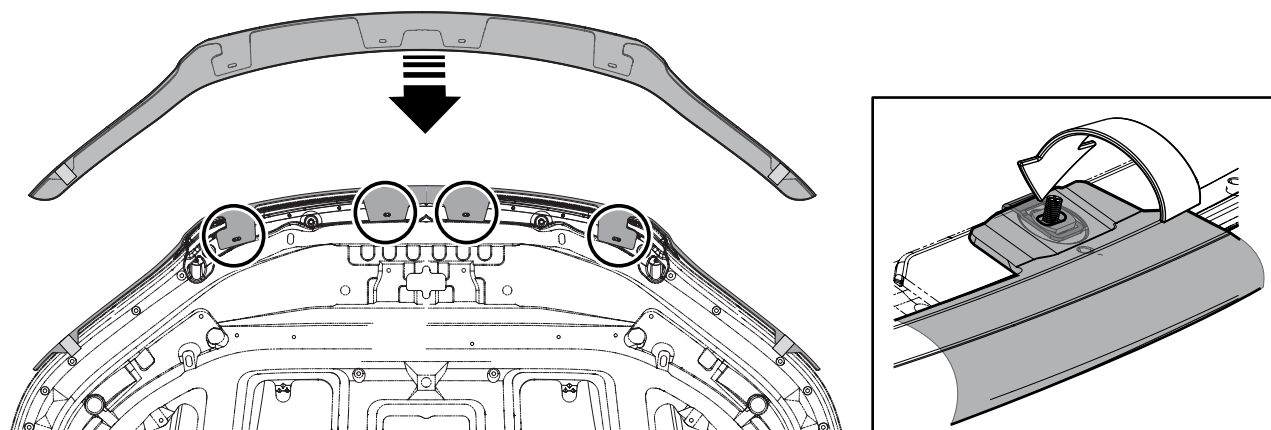

11

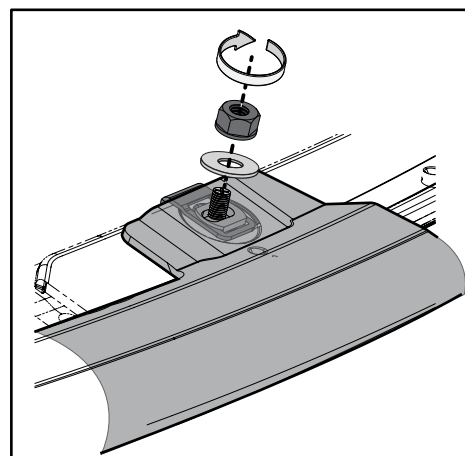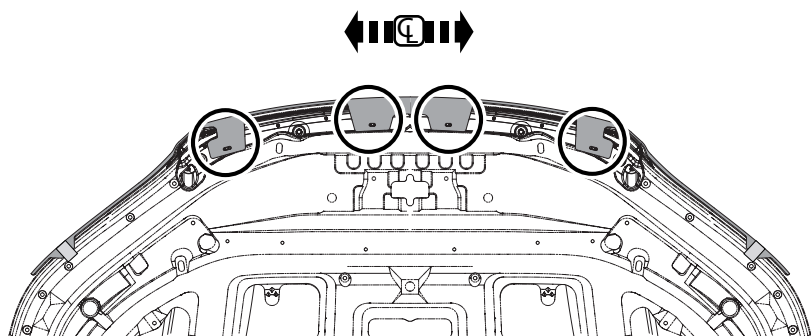

12

