

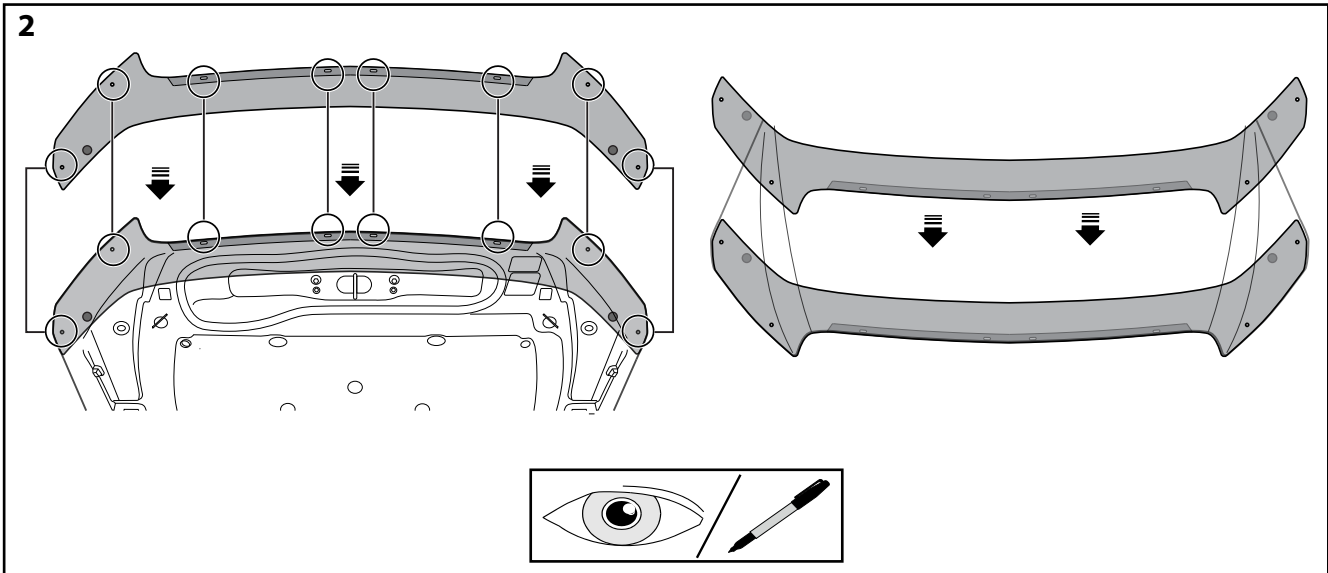
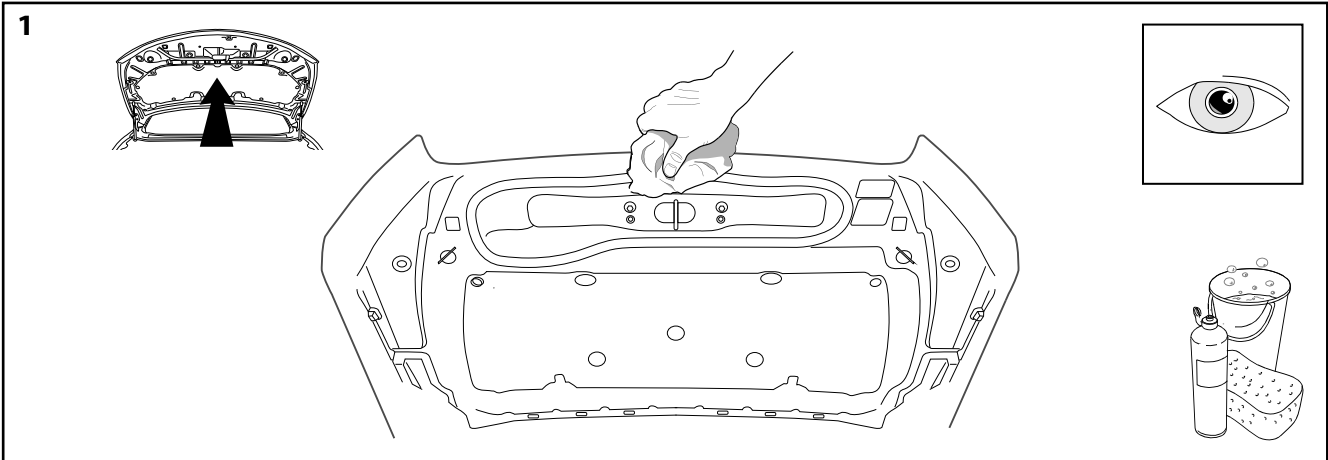



ACRYLIC BONNET PROTECTOR INSTALLATION INSTRUCTIONS

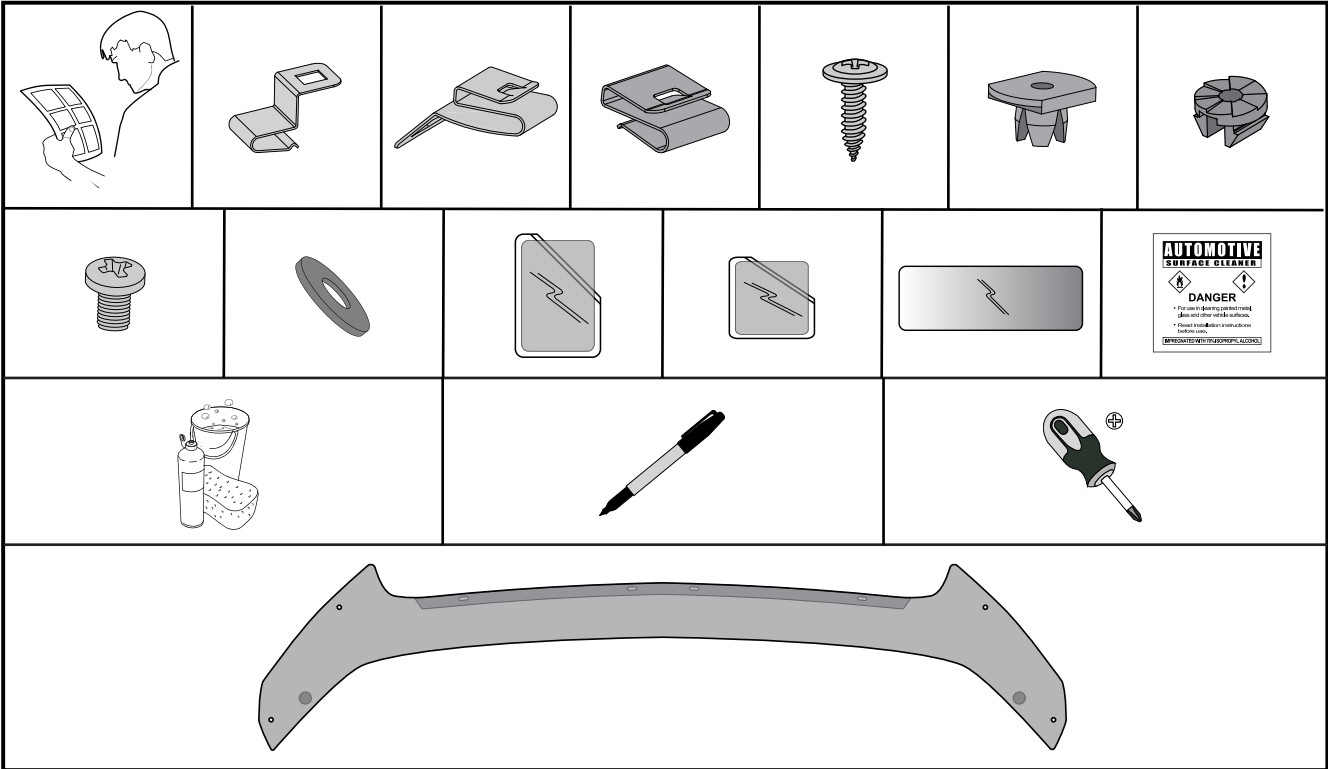


3

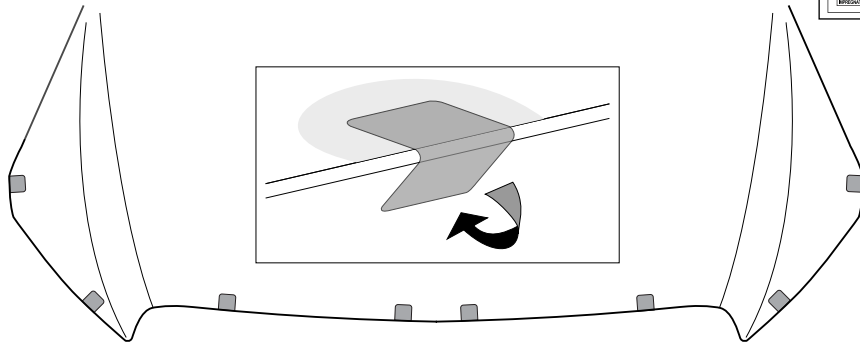


4

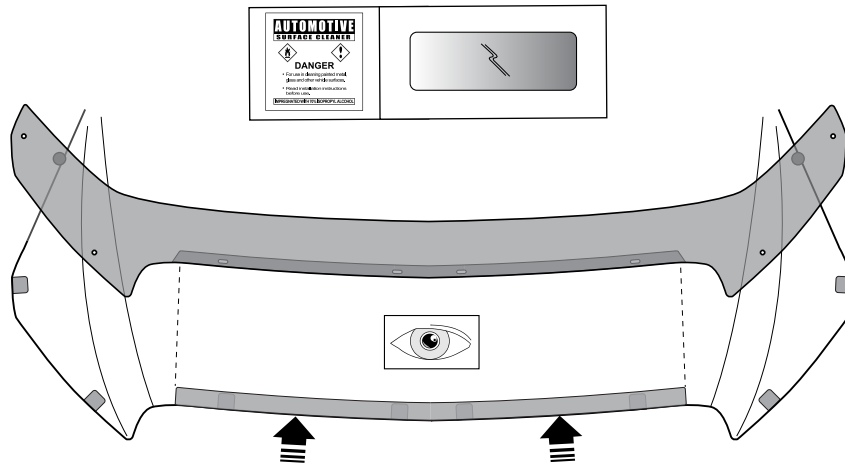




5

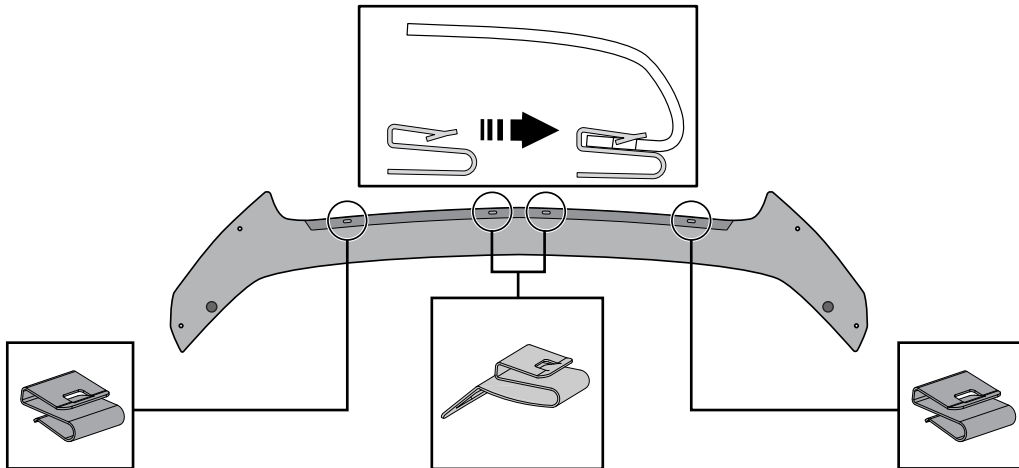




6

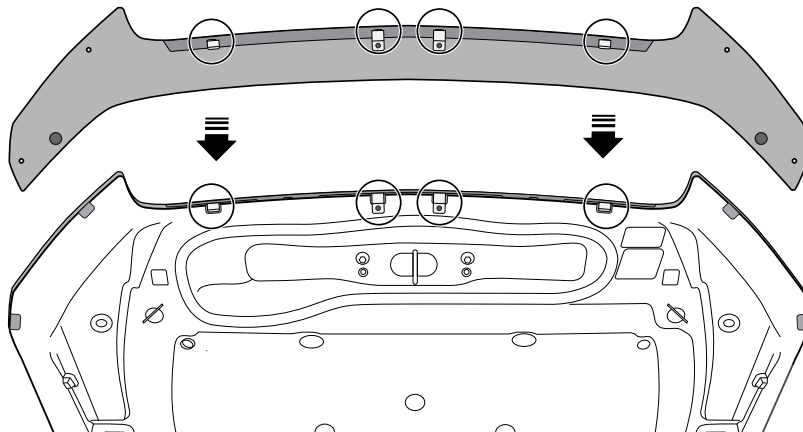



7

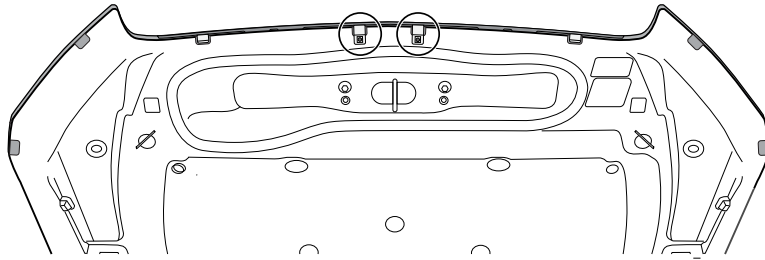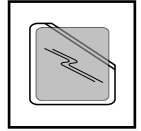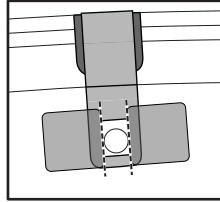



8

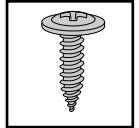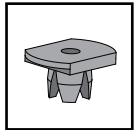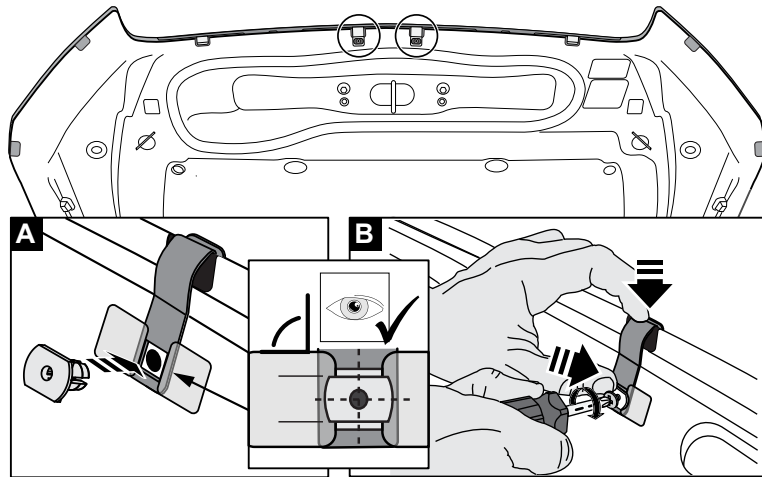

9

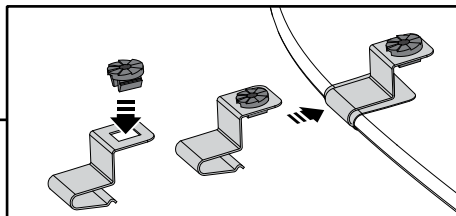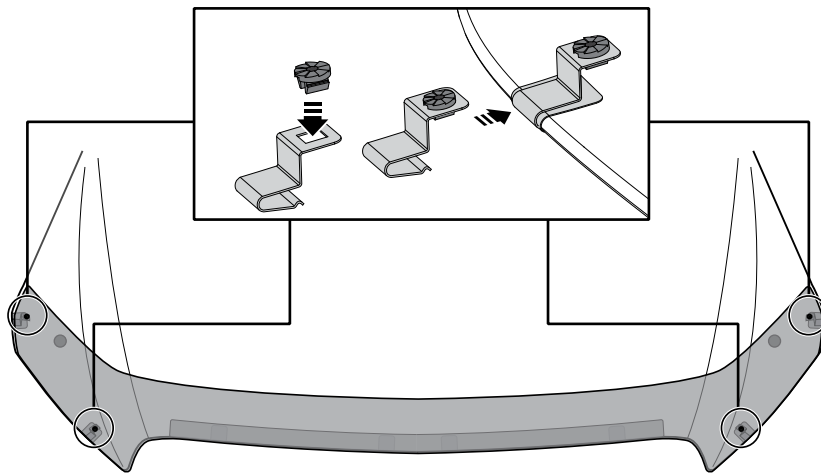

10

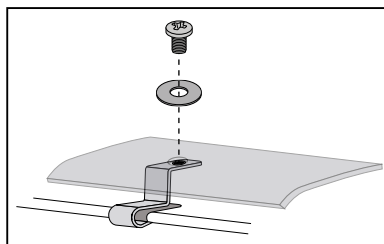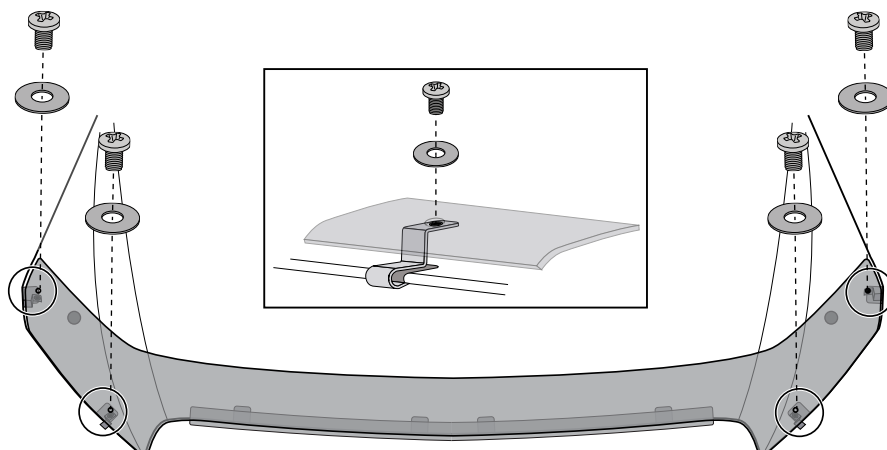

11

