


# RR01 AB

## Roof Rack Bracket Installation Instructions

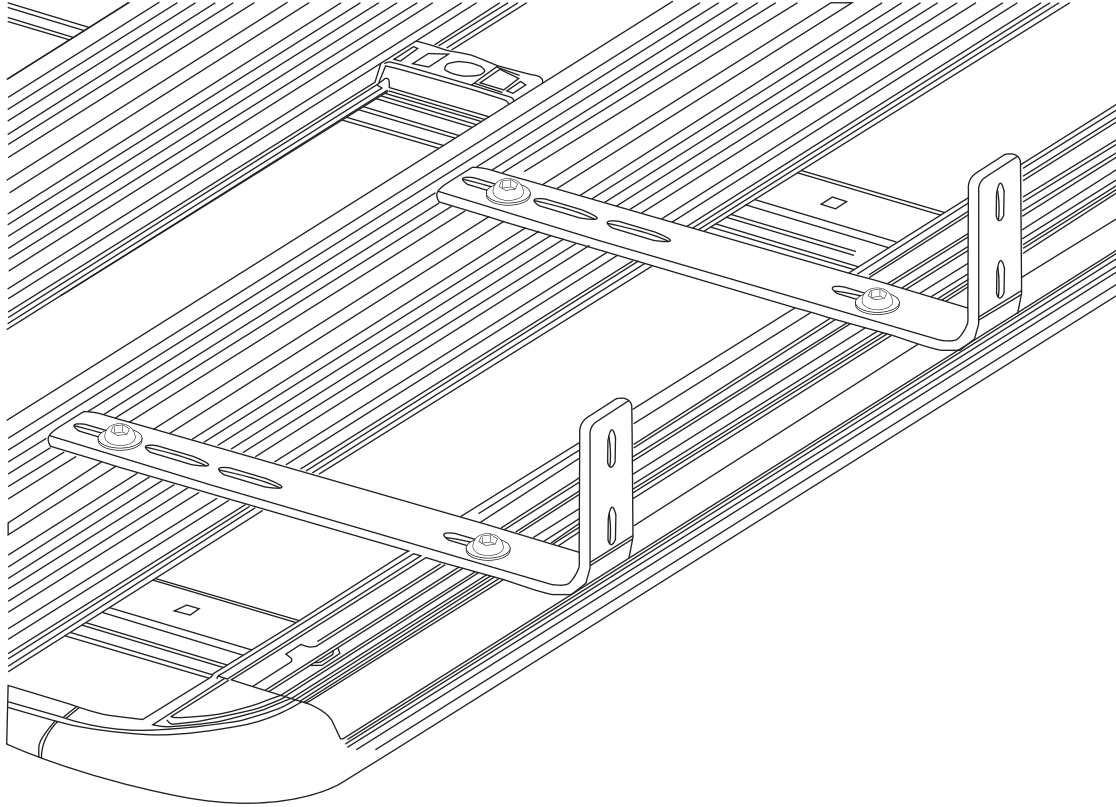

Installation Time: Approx. 30 mins

Place these instructions in vehicle's glove box after installation is complete

### General Notes

- Read through the fitting instructions before installation of accessory.
- Always install the accessory following the fitting instructions. Failure to do so may cause damage to the vehicle or the accessory.
- Ensure all recyclable discarded vehicle accessory components and packaging are recycled following local recycling regulations.
- It is always recommended that this accessory is fitted by a qualified Technician.
- Safely store and protect any removed vehicle components.
- Ensure all bare metal surfaces are protected using Automotive Bare Metal Primer and touch-up paint.
- Please check content of kit using this list and subsequent sketches.
- Remove all metal swarf and dust from all vehicle surfaces if surface is used for accessory installation.

### Safety Notes

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.



### Care Instructions:




Clean with mild detergent and water solution.




Do not use abrasive cleaners or solvents.

### PARTS LIST




**1**



M8 x 25 Hex  
Socket Button Head Screw  
Qty - 4

**2**



D8 Spring Washer  
Qty - 4

**3**




M8 x 34 x 20 x 5  
Washer Plate  
Qty - 4

**4**



D8 Flat Washer  
Qty - 4

**4**

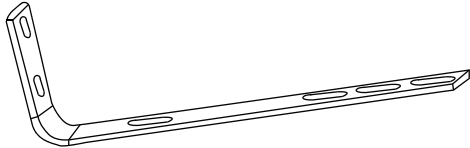


Bracket  
Qty - 2



### TOOLS REQUIRED



8mm Allen Key

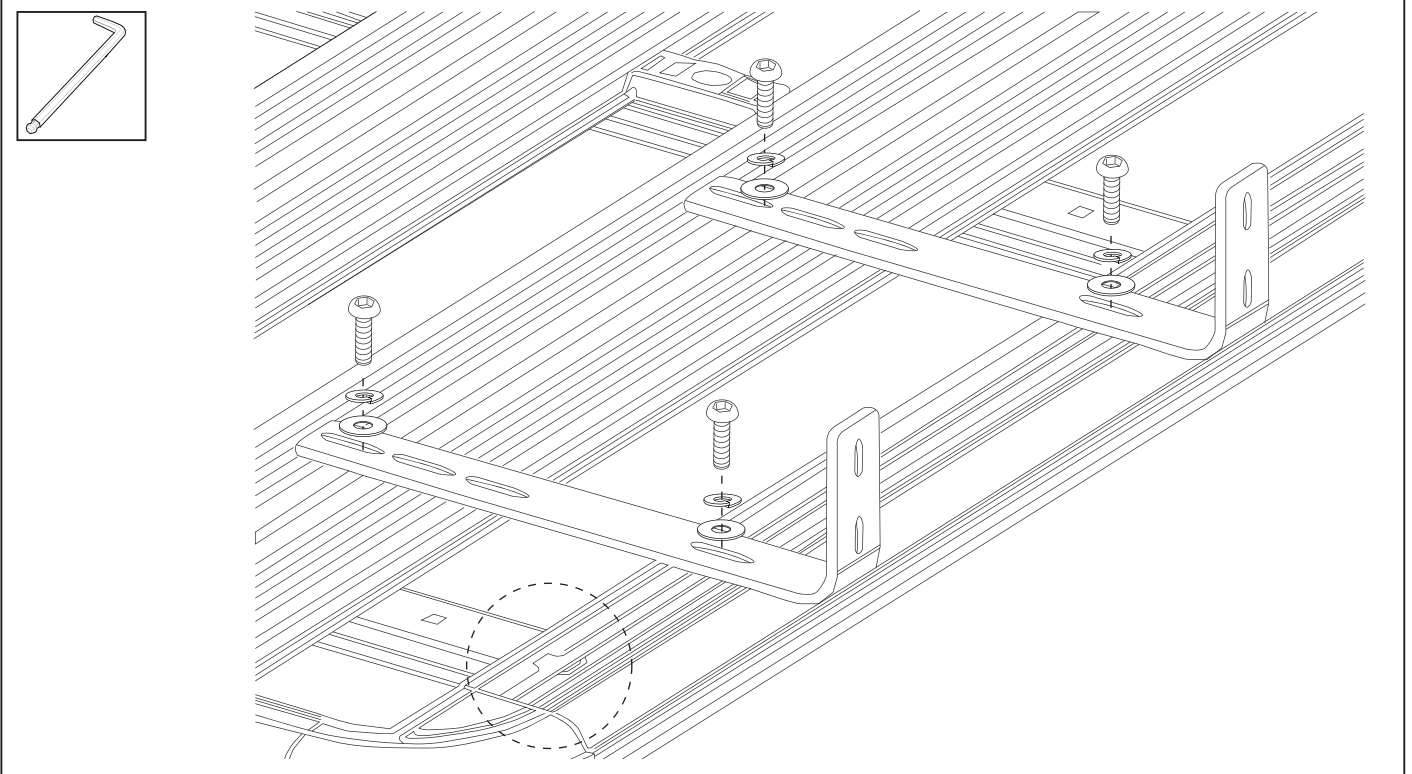**INSTALLATION INSTRUCTIONS**

1. Slide M8 Nut Plate into Roof Rack and position where Bracket will be installed. Secure Bracket with M8 x 25mm Hex Socket Button Head Screws, D8 Spring Washer and D8 Flat Washer. Tighten Screws with 8mm Allen Key.

NOTE: Check if bolts are miss aligned and all bolts are tightened.